

# PROFF WOODCARE MAINTENANCE OIL



[www.proffwoodcare.com](http://www.proffwoodcare.com)

## AREAS OF APPLICATION:

Proff Woodcare Maintenance Oil is used for re-oiling of wood floors and woodwork in general. It produces a strong and wear resistant surface with enhancement of the wood grain. Maintenance Oil natural produces a golden colour whereas white enhances the light colour of oak, ash, pine wood.

## APPLICATION OF MATERIAL:

Apply approximately one full coat of Proff Oil to 30 to 40 square metres of wood floor lengthwise of the wood grain with a paint roller. Use a floor machine with white pad to work the oil into the wood grain.

## FINISH:

Proff Woodcare Maintenance Oil produces a beautiful satin matt finish which can be maintained and repaired easily. The re-oiled floor and woodwork should be cleaned with Proff Woodcare Wood Floor Soap or Oil Refresher. An oiled floor is highly durable and easy to care for.

- \* Ensures long lasting durability of the oiled floor
- \* Easy cleaning with Wood Floor Soap natural or white
- \* Suitable for all wood species
- \* Suitable for large commercial areas with high frequency of use

- In natural, white, grey, brown and black
- For re-oiling of wood floor and furniture
- For maintenance of oiled and waxed wood with floor machine or from hand
- Suitable for all oiled and oil/waxed floor and furniture



# PROFF WOODCARE MAINTENANCE OIL



[www.proffwoodcare.com](http://www.proffwoodcare.com)

## SO ARBEITEN SIE RICHTIG

**Maintenance Oil** is suitable for use on all pre-oiled interior floors and woodwork in general. It brings back the lustre to the oiled surface and makes it harder wearing and more resistant to stains after every application. Maintenance Oil may be applied by hand or with a floor machine.

### Work Instruction:

1. Make sure that the floor or woodwork is freshly cleaned with Intensive Wood Cleaner. Ensure that the floor is completely dry before starting the application of the oil.
2. Shake the bottle and if white oil, ensure that all white pigments are evenly distributed in material before application. Apply 1 litre of oil to 30 to 40 m<sup>2</sup> of floor possibly with spray bottle. Now work the oil inside wood grain with floor machine mounted with white pad or by hand with white pad.
3. If not all oil could be worked into the wood grain, scrape the excess oil onto the next section of the floor or remove with cotton cloths. Continue in this way until complete area has been coated.
4. Now buff the complete area with a white pad under floor machine or by hand.
5. After a 4 hour pre-drying of the area, if the oil was buffed in with floor machine, you may use the floor with caution. If applied by hand, wait 8 hours before using the floor with caution.
6. Leave the oiled area to dry for 24 hours. Do not expose the floor to water during drying time. Cover walkways with corrugated paper.
7. Use Proff Woodcare Wood Floor Soap mixed with water for regular cleaning. For intermediate re-oiling, Oil Refresher mixed with water is also an option.

Risk of self ignition: Sanding dust and oil wetted cloths and pads must be disposed of either by soaking in water or burnt immediately after use. Risk of self ignition.

Disposal: Empty containers and product residue disposed of according to regional rules and regulations.



[www.nowocoat.dk](http://www.nowocoat.dk)